


# Assembly Instructions

## CABINET BENCH

**MODEL**  
**630**  
**1W814B**

### PARTS LIST


REFERENCE LETTER	QUANTITY AND DESCRIPTION	PART NUMBER
A	<input type="checkbox"/> 1 Top Shelf	1W814TS
B	<input type="checkbox"/> 1 Lower Shelf	1W814BS
C	<input type="checkbox"/> 2 Rear Posts	1W814RCP
D	<input type="checkbox"/> 1 Front Post w/Hinge (right hand)	1W814FCPRH
E	<input type="checkbox"/> 1 Back	1W814BP
F	<input type="checkbox"/> 2 Sides	1W814SP
G	<input type="checkbox"/> 1 Door Assembly	1W814DA
H	<input type="checkbox"/> 1 Front Post (left hand)	1W814FCPLH
I	<input type="checkbox"/> 1 Locking Handle w/Keys	305T
J	<input type="checkbox"/> 3-Intermediate Shelf	1W814SHELF
*	<input type="checkbox"/> 53 1/4—20 x 1/2 Nuts/Bolts	NB53S

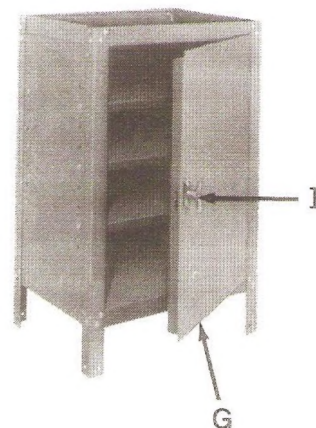

\*Standard hardware item, may be purchased locally.

### HOW TO ASSEMBLE UNITS

1. Set rear posts on floor or horses. Set back panel between posts and top and bottom shelf. Top shelf to be set with flanges up and bottom shelf with flanges down. Bolt through posts, panel and shelves.
2. Set side panels into rear posts, place front posts, left and right, into position and bolt through posts, panels and shelves.
3. Stand unit in upright position. Square off and tighten all bolts.
4. Mount door assembly to hinges fastened to right front post.
5. Assemble lock assembly as per instruction sheet furnished with hardware.
6. Locate and insert intermediate shelves in desired position.

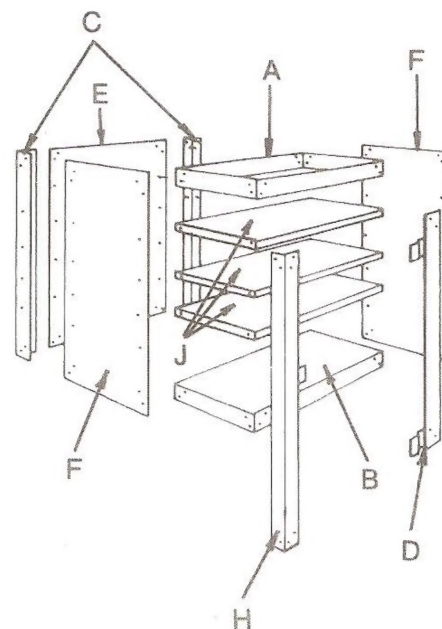

**edsal**

4400 south packers avenue • chicago, illinois 60609